



# S11 Server Installation Guide

**Document Version 0.1**

**Mar. 2019**

© Copyright Bitmaintech Pte.Ltd. 2007 – 2019. All rights reserved.

Bitmaintech Pte.Ltd. (Bitmain) reserves the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice.

Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to Bitmain's terms and conditions of sale supplied at the time of order acknowledgment.

Bitmain warrants performance of its products to the specifications applicable at the time of sale in accordance with Bitmain's standard warranty. Testing and other quality control techniques are used to the extent Bitmain deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

Bitmain assumes no liability for third-party applications assistance. Customers are responsible for their products and applications using Bitmain components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

Bitmain does not warrant or represent that any license, either express or implied, is granted under any Bitmain patent right, copyright or other Bitmain intellectual property right relating to any combination, machine, or process in which Bitmain products or services are used. Information published by Bitmain regarding third-party products or services does not constitute a license from Bitmain to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from Bitmain under the patents or other intellectual property of Bitmain.

Resale of Bitmain products or services with statements different from or beyond the parameters stated by Bitmain for that product or service voids all express and any implied warranties for the associated Bitmain product or service and is an unfair and deceptive business practice. Bitmain is not responsible or liable for any such statements.

All company and brand products and service names are trademarks or registered trademarks of their respective holders.

All text and figures included in this publication are the exclusive property of Bitmaintech Pte.Ltd. (Bitmain), and may not be copied, reproduced, or used in any way without the express written permission of Bitmain. Information in this document is subject to change without notice and does not represent a commitment on the part of Bitmain. Although the information in this document has been carefully reviewed, Bitmain does not warrant it to be free of errors or omissions. Bitmain reserves the right to make corrections, updates, revisions or changes to the information in this document.

Bitmaintech Pte.Ltd.  
Tel:+86-400-890-8855  
[www.bitmain.com](http://www.bitmain.com)

---


## Table of Contents

---

<b>1.Overview</b> .....	<b>4</b>
1.1 S11 Server Components .....	5
1.2 Specifications .....	7
<b>2.Setting Up the Server</b> .....	<b>9</b>
<b>3.Configuring the Server</b> .....	<b>11</b>
<b>4 Monitoring Your Server</b> .....	<b>12</b>
<b>5. Administering Your Server</b> .....	<b>13</b>
5.1 Checking Your Firmware Version .....	13
5.2 Upgrading Your System .....	13
5.3 Modifying Your Pass Word .....	14
5.4 Restoring initial Settings .....	14

## 1. Overview

The S11 server is Bitmain's newest version in the S11 server series. Power supply APW8 is part of S11 server. All S11 servers are tested and configured prior to shipping to ensure easy set up.

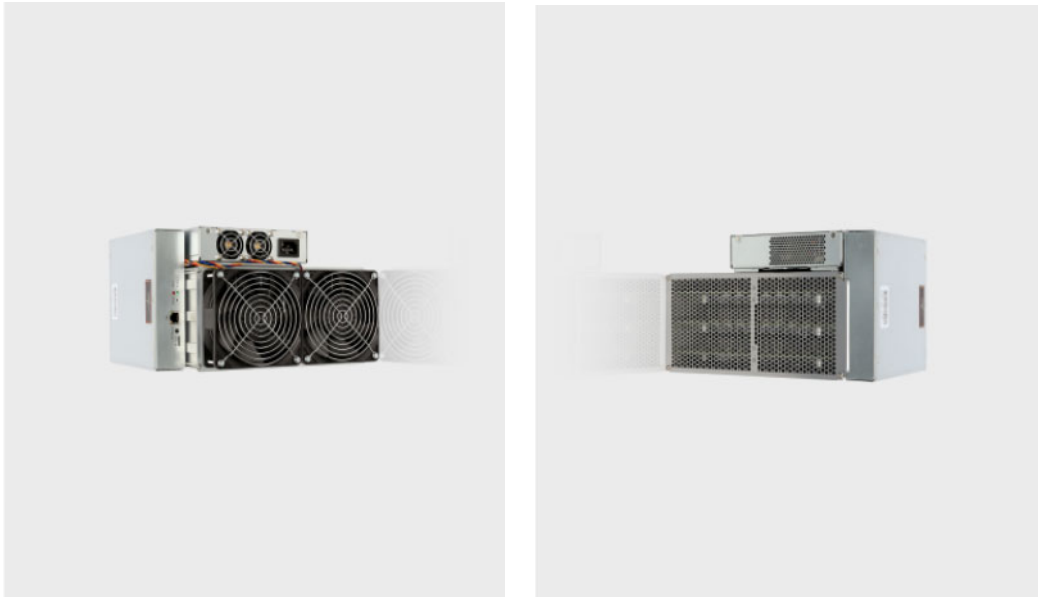


**Caution:**


1. The socket-outlet shall be installed near the equipment and shall be easily accessible.
2. Please refer to the layout above to place your goods in usage in case of any damage.

### 1.1 S11 Server Components

The S11 server main components and controller front panel are shown in the following figure:

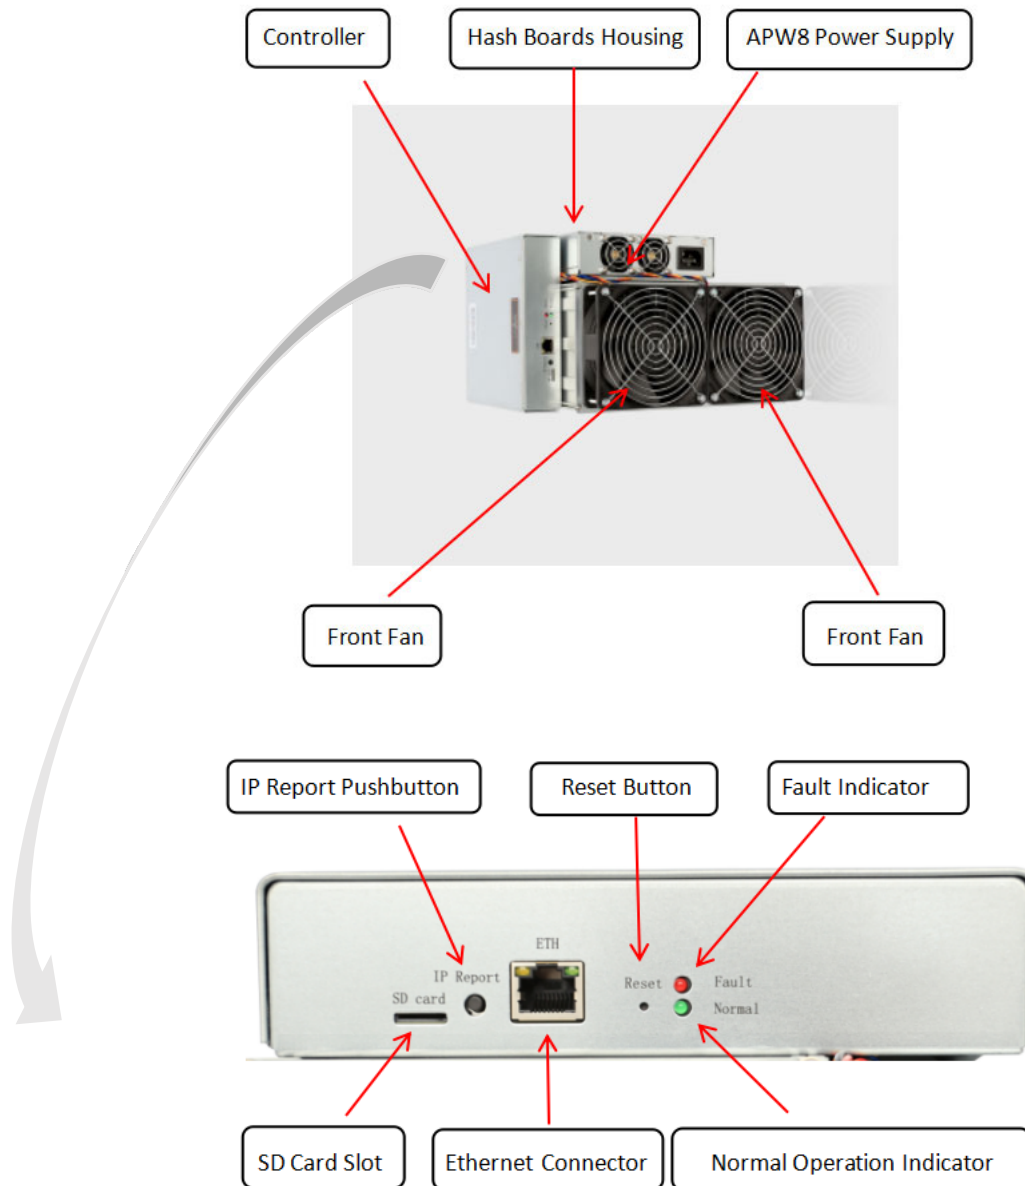

### APW8 Power Supply:

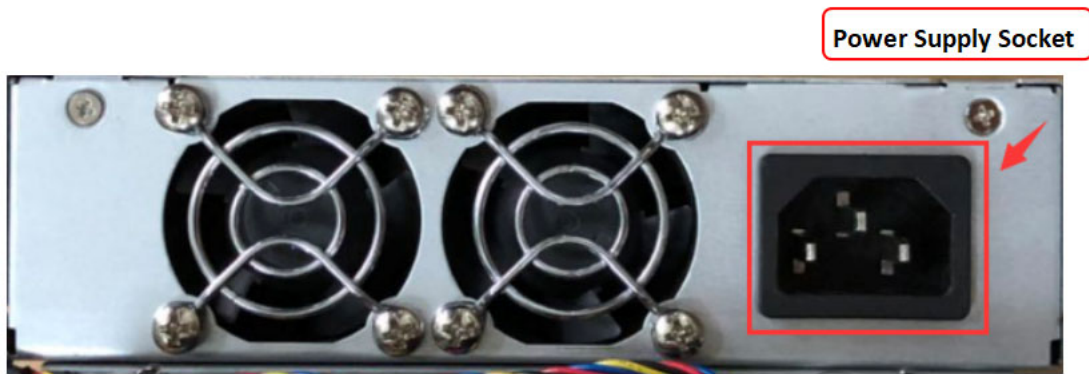

**Note:**

1. Power supply APW8 is part of S11 server. For detailed parameters, please refer to the specifications below.
2. Additional power cord is needed.

## 1.2 Specifications

Product Glance	Value	
	Low Power	Normal
Crypto Algorithm/Coins	SHA256/ BTC/BCH	
Hashrate, TH/s	15.50~17.00	19.00
Reference power on wall, Watt	992~1088	1349
Reference power efficiency on wall @25°C,J/TH	64.00	71.00

Detailed Characteristics		Value		
		Min	Typ	Max
Hashrate & Power				
Hashrate, TH/s	Low Power	15.5~17.0		+3% (1-1)
	Normal	19.00		19.45
Power efficiency on wall @25°C, J/TH	Low Power	64.00	68.48	
	Normal	71.00	75.97	
Power efficiency on wall @40°C, J/TH	Low Power	67.49	72.22	
	Normal	74.76	80.00	
Power on wall, Watt (1-2)	Low Power	992	1265	
	Normal	1349	1556	
Power supply AC input voltage, Volt (1-3)		200	220	240
Power supply AC input current, Amp(1-4)	Low Power	4.51		6.33
	Normal	6.13		7.78
Power supply Input AC Frequency Range, HZ		47	50	63
Hardware Configuration				

Quantity of hash chips	252		
Quantity of hash boards	3		
Networking connection mode	RJ45 ethernet 10/100M		
Miner Size(Length*Width*Height, w/o package),mm <sup>(2-1)</sup>	254*176*297		
Net weight, kg <sup>(2-2)</sup>	8.1		
Noise, dBA @25°C <sup>(2-3)</sup>	76		
Environment Requirements			
Operation temperature, °C	0	25	40
Storage temperature, °C	40	25	85
Operation humidity, RH	5%		95%

**Notes:**

(1-1) In Low Power Mode, Max Hashrate is about Typ hashrate \*103%

(1-2) Min condition: 25°C, min J/TH, typical hashrate

Max condition: 40°C, max J/TH, max hashrate

**(1-3) Caution: Wrong input voltage may probably cause miner damaged**

(1-4) Typ condition: min reference power, typical AC input voltage

Max condition: max reference power, min AC input voltage

(2-1) Including PSU size

(2-2) Including PSU weight

(2-3) Max condition: Fan is under max RPM(rotation per minute).

**Specifications for APW8:**

Input	Voltage Range	200-240V AC
	Frequency Range	50/60Hz
	Power Factor	>0.99
	Leakage Current	<2mA
	Overheat Protection	Yes
Environment	Operating Temperature	0°C-40°C
	Operating Humidity	5%RH-95%RH(non-condensing)
Cooling System	Fan	forced-- air cooling




## 2. Setting Up the Server


To set up the server:

 The file IPReporter.zip is supported by Microsoft Windows only.


1. Go to the following site:  
<https://shop.bitmain.com/support.htm?pid=00720160906053730999PVD2K0vz0693>
2. Download the following file: IPReporter.zip
3. Extract the file.

 The default DHCP network protocol distributes IP addresses automatically.


4. Right-click **IPReporter.exe** and run it as Administrator.
5. Select one of the following options:
  - Shelf, Step, Position – suitable for farm servers to mark the location of the servers.
  - Default – suitable for home servers.
6. Click **Start**.

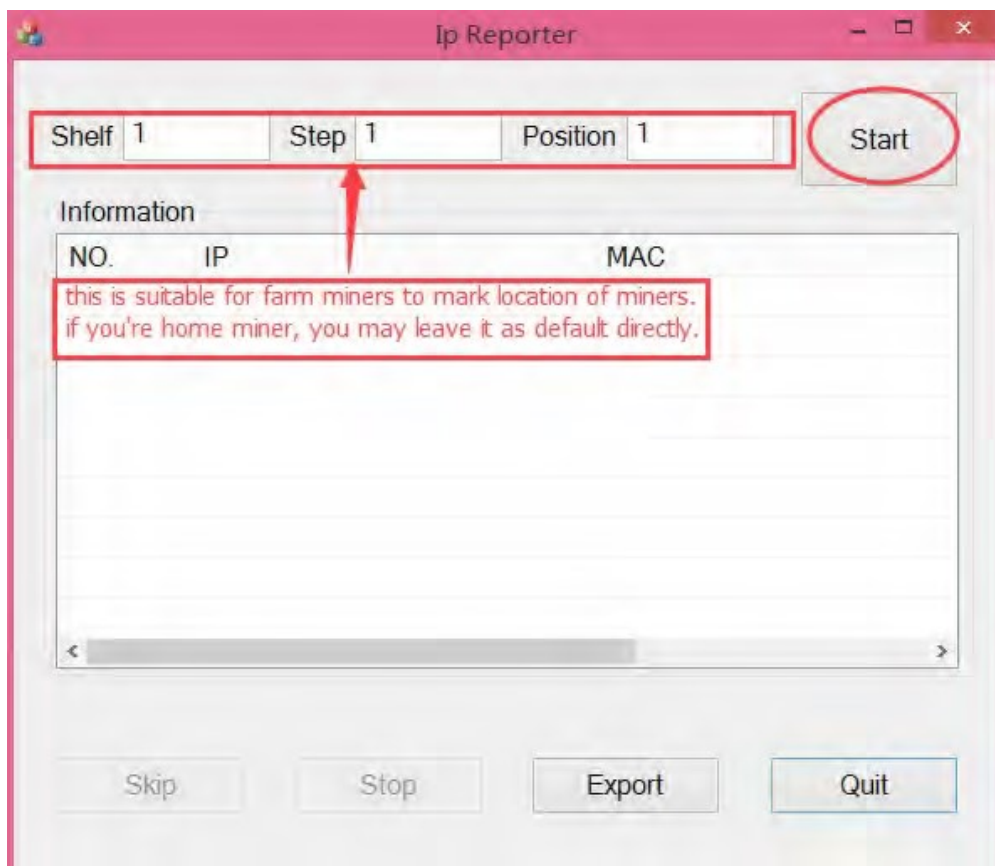


- On the controller board, click the IP Report button. Hold it down until it beeps (about 5 seconds).

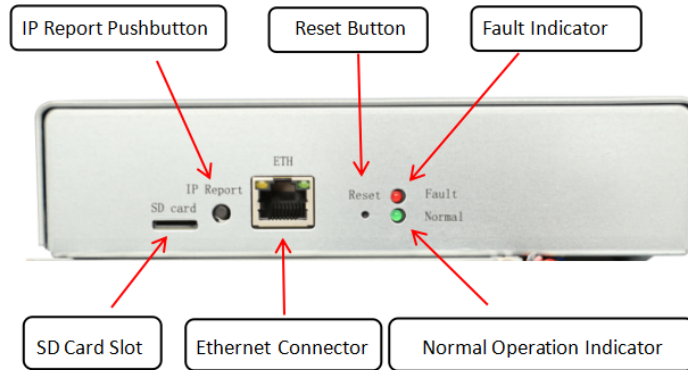

The IP address will be displayed in a window on your computer screen.

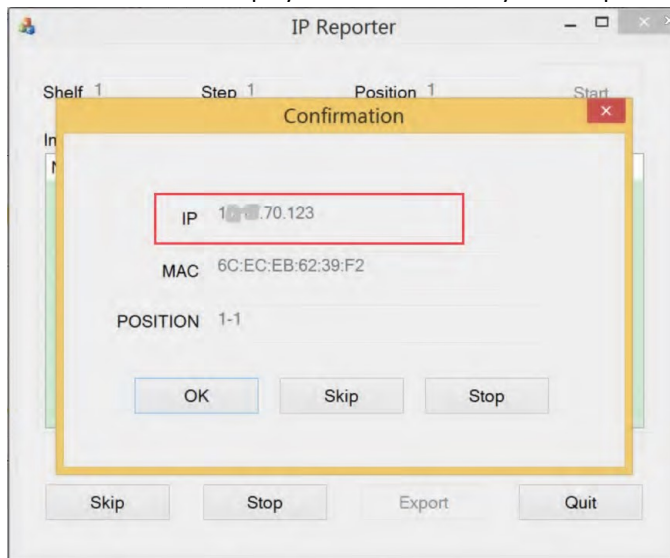

- In your web browser, enter the IP address provided.
- Proceed to login using `root` for both the username and password.
- In the Network section, you can assign a DHCP IP address (optional).
- Click **Save & Apply**.

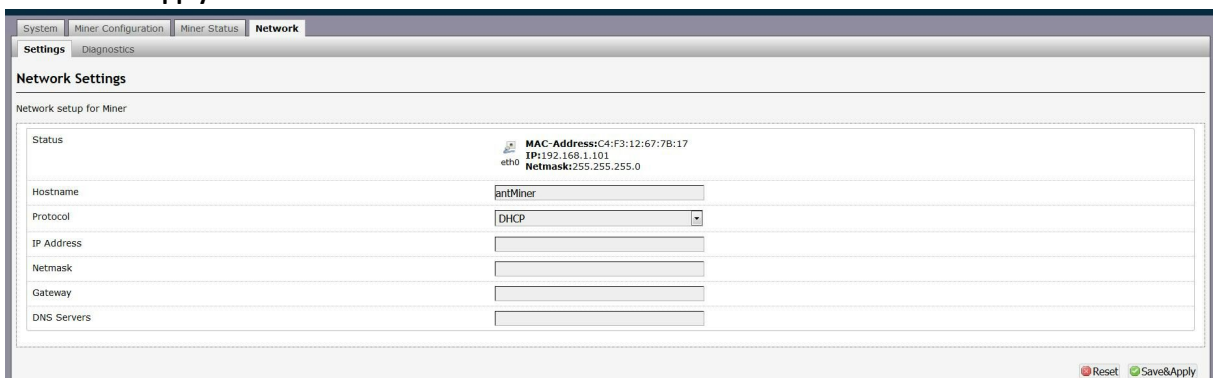



### 3. Configuring the Server

#### Setting Up the Pool


To configure the server:

1. click **General Settings**.

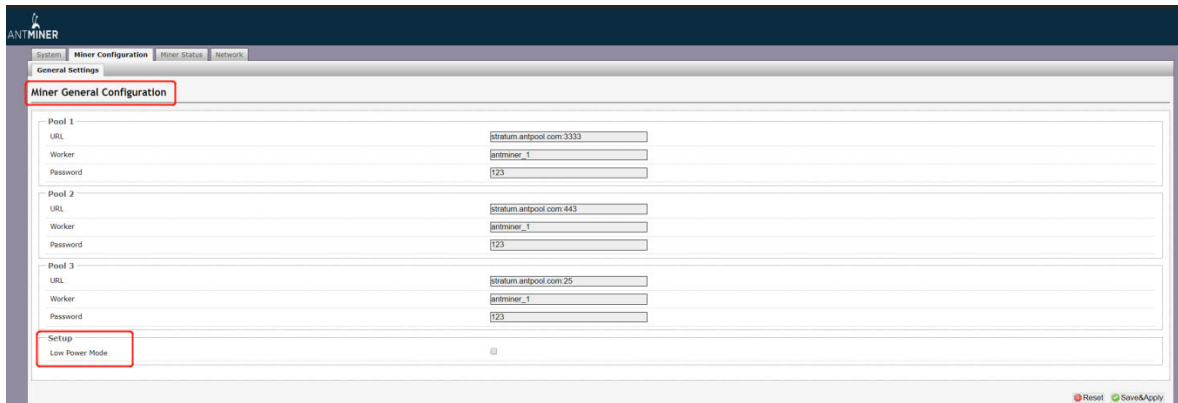

 **Note:** There are two modes of Hashrate which u may adjust: Normal and Low power mode. Power consumption varies with different mode. Please refer to the specifications above for more details.

2. Set the options according to the following table:


Option	Description
Pool URL	Enter the URL of your desired pool. <div style="border: 1px solid black; border-radius: 10px; padding: 10px; margin-top: 10px;">  <p>The S11 server can be set up with three mining pools, with decreasing priority from the first pool (pool 1) to the third pool (pool 3). The pools with low priority will only be used if all higher priority pools are offline.</p> </div>
Worker	Your worker ID on the selected pool.
Password	The password for your selected worker.

3. Click **Save & Apply** to save and restart the server.

## 4. Monitoring Your server

To check the operating status of your server:

1. Click the status marked below.

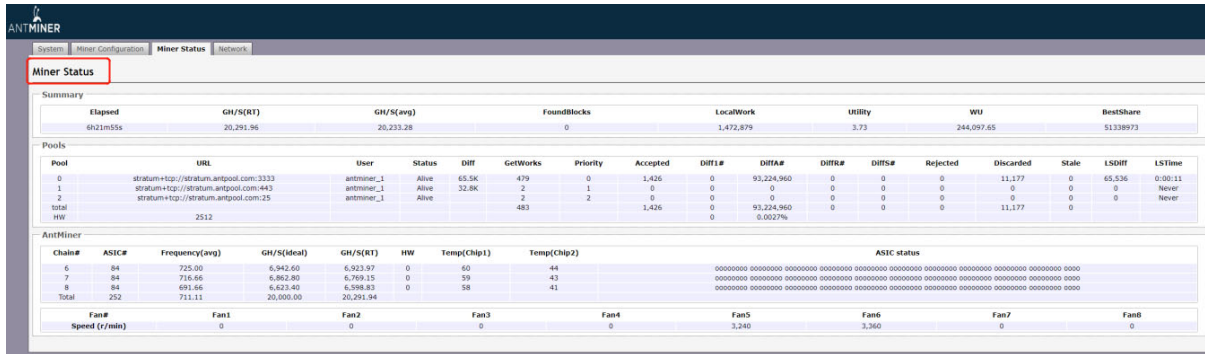

**Note:** The S11 server is with automatic frequency adjustment. Firmware will stop running when the Temp(PCB) reaches to 95°C, there will be an error message “Fatal Error: Temperature is too high!” shown in the bottom of kernel log page.

2. monitor your server according to the descriptions in the following table:


Option	Description
ASIC#	Number of chips detected in the chain.
Frequency	ASIC frequency setting.
GH/S(RT)	Hash rate of each hash board ( GH/s)
Temp(PCB)	Temperature of each hash board (°C).(Applied only to server with fixed frequency)
Temp(Chip)	Temperature of the chips on each hash board (°C).
ASIC status	One of the following statuses will appear: <ul style="list-style-type: none"> <li>● <b>O</b> - indicates OK</li> <li>● <b>X</b> - indicates error</li> <li>● <b>- -</b> indicates dead</li> </ul>

## 5. Administering Your Server

### 5.1 Checking Your Firmware Version

To check your firmware version:

1. In **System**, click the **Overview** tab.
2. **File System Version** displays the date of the firmware your server use. In the example below, the server is using firmware version 20190102.

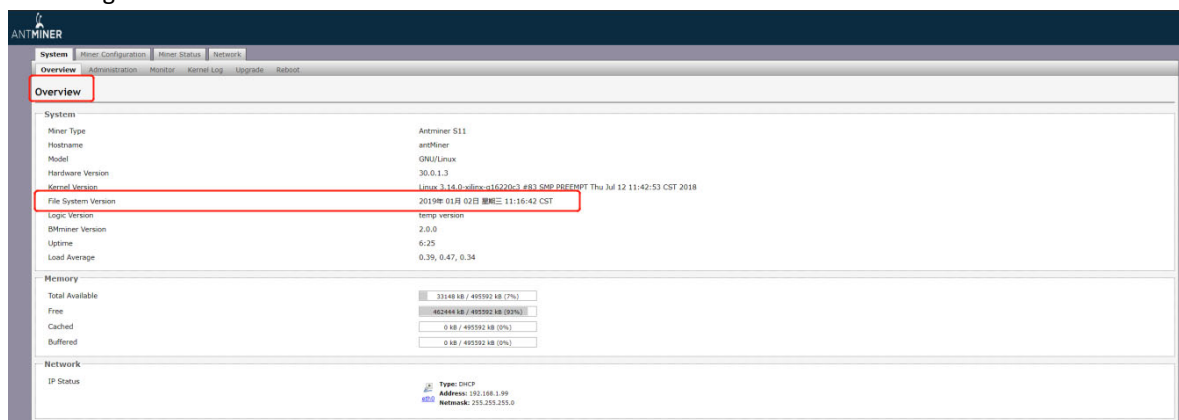

The screenshot shows the Antminer S11 web interface. The 'System' tab is selected, and the 'Overview' sub-tab is active. A table of system information is displayed, with the 'File System Version' row highlighted by a red box. The value for 'File System Version' is '201901 02日 星期三 11:16:42 CST'. Other system information includes Miner Type (Antminer S11), Hostname (antminer), Model (GNU/Linux), Hardware Version (30.0.1.3), Kernel Version (Linux 3.14.0-x86\_64), Logic Version (temp version), BitMiner Version (2.0.0), Uptime (6:25), and Load Average (0.39, 0.47, 0.34). Memory usage is shown as 33148 kB / 495592 kB (7%), and network status is Type: DHCP, Address: 192.168.1.99, Netmask: 255.255.255.0.


### 5.2 Upgrading Your System



Make sure that the S11 server remains powered during the upgrade process. If power fails before the upgrade is completed, you will need to return it to Bitmain for repair.


To upgrade the server's firmware:

1. In **System**, click **Upgrade**.

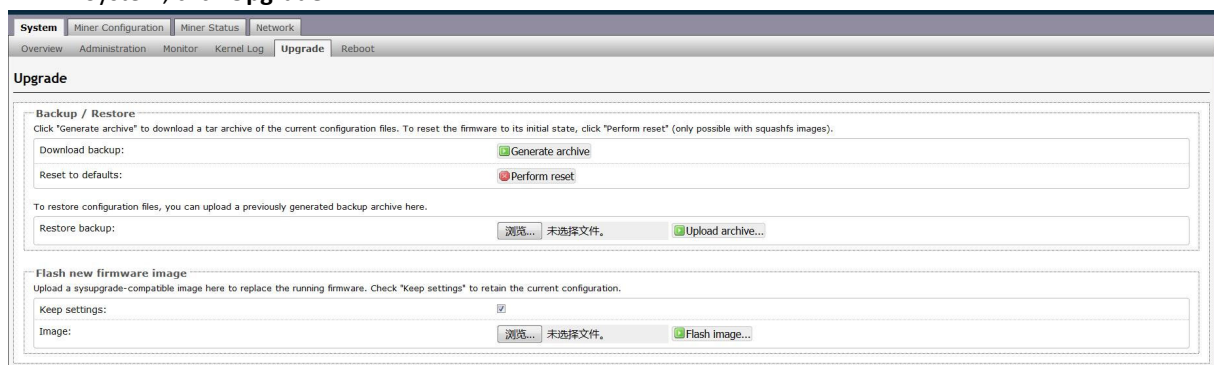

The screenshot shows the 'Upgrade' page in the Antminer S11 web interface. The 'System' tab is selected, and the 'Upgrade' sub-tab is active. The page is divided into two main sections: 'Backup / Restore' and 'Flash new firmware image'. The 'Backup / Restore' section includes a 'Generate archive' button and a 'Perform reset' button. The 'Flash new firmware image' section includes a 'Flash image...' button. The page also contains instructions for backing up and restoring configuration files.

2. For **Keep Settings**:
  - Select the check box to keep your current settings (default).
  - Clear the check box to reset the server to default settings.
3. Click the **选择文件 (Browse)** button and navigate to the upgrade file. Select the upgrade file, then click **Flash image**. A message appears notifying you if the S11 firmware can be upgraded and if yes, will then proceed to flash the image.
4. When the upgrade is completed, the following message appears:

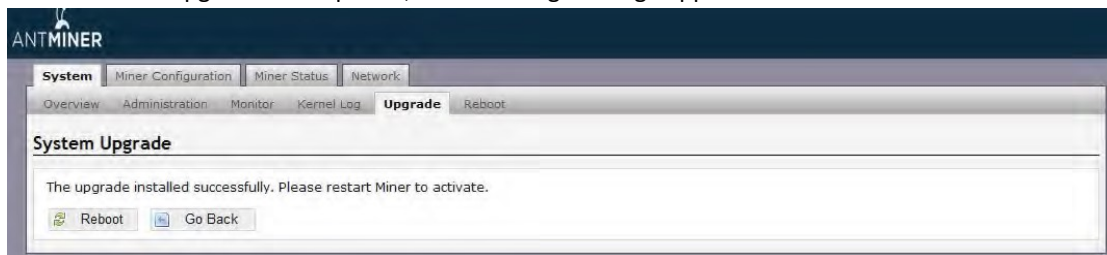


5. Click one of the following options:
  - **Reboot** - to restart the server with the new firmware.
  - **Go Back** - to continue mining with the current firmware. The server will load the new firmware next time it is restarted.

### 5.3 Modifying Your Password

To change your login password:

1. In **System**, click the **Administration** tab.
2. Set your new password, then click **Save & Apply**.

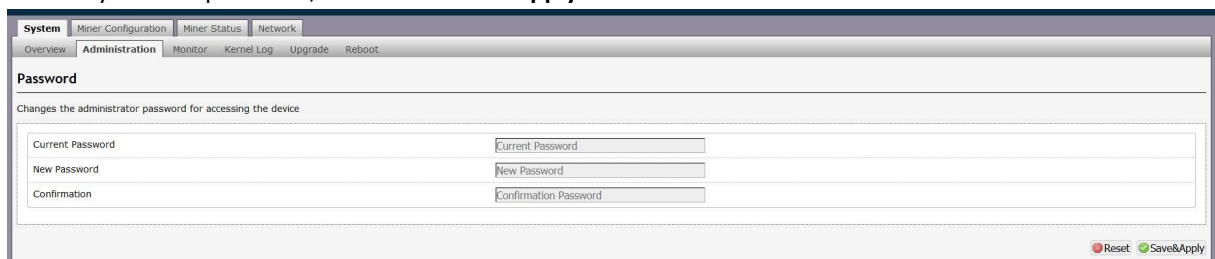

### 5.4 Restoring Initial Settings

To restore your initial settings

1. Turn on the server and let it run for 5 minutes.
2. On the controller front panel, press and hold the **Reset** button for 10 seconds.



Resetting your server will reboot it and restore its default settings. The red LED will automatically flash once every 15 seconds if the reset is operated successfully.

**Regulation:**

**FCC Notice (FOR FCC CERTIFIED MODELS):**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

**EU WEEE: Disposal of Waste Equipment by Users in Private Household in the European Union**



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

**台灣 ROHS:**

設備名稱： \_\_\_\_\_ ， 型號： \_\_\_\_\_

單元	有害物質					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr+6)	多溴聯苯 (PBB)	多溴二苯 醚 (PBDE)
外殼	○	○	○	○	○	○
電路板組 件	—	○	○	○	○	○
其他線材	—	○	○	○	○	○

備考 1. “超出 0.1 wt %” 及 “超出 0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值。  
 備考 2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。  
 備考 3. “—” 係指該項限用物質為排除項目